

ONE80

WATER SOLVED™


USER MANUAL

WELCOME TO THE ONE80 REVOLUTION™


Thank you for joining the ONE80 Revolution™. Please take the time to read this User Manual carefully, as improper use may cause your ONE80 Revolution™ to malfunction and will void the 1-Year Limited Warranty.

SECTION 1 – OPERATING INSTRUCTIONS & FEATURES


- A. Remove the protective plastic covering from the LCD Screen.

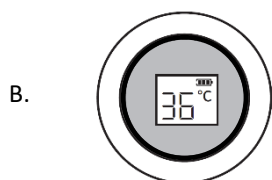

Touchpoint: To use your ONE80 Revolution™, touch anywhere in the shaded area to activate the different functions found below.

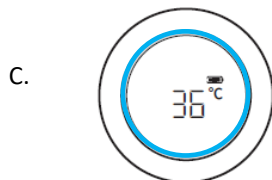


Wake-up: To wake-up your ONE80 Revolution™, tap your finger on the LCD screen. A solid light blue ring will appear.

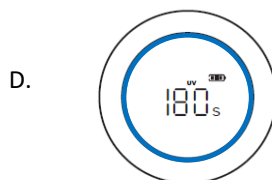


Sterilization: While your ONE80 Revolution™ is awake, press and hold your finger anywhere in the shaded area to activate sterilization. A dark blue ring will appear and will flash slowly until the sterilization process is complete. The LCD screen will also count down from 180 seconds.

Please note: Your ONE80 Revolution™ has a built-in sensor that will automatically stop the sterilization process if the lid is removed from the bottle. In this case, a red ring will appear and flash 5 times indicating the Sterilization process has stopped. We recommend that you do **not** remove the lid during the Sterilization process, as exposure to UV-C light may cause damage to your eyes or skin.

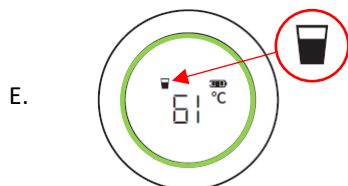


Drink Reminder: Your ONE80 Revolution™ features a Drink Reminder function that will remind you to drink every 90 minutes. To set the Drink Reminder, tap twice on the LCD screen and a glass icon will appear. After 90 minutes, an alarm will sound and light green ring will appear and continue to flash for 30 seconds.


- F. **Temperature Display:** Your ONE80 Revolution™ automatically displays the temperature of the liquid inside. The ring will change colours depending on the temperature range below:

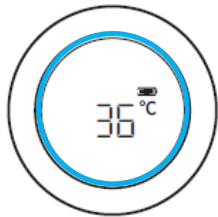

0°C – 36°C
Light Blue Ring

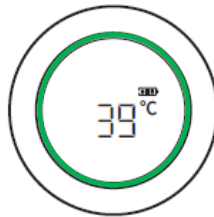

37°C – 60°C
Green Ring

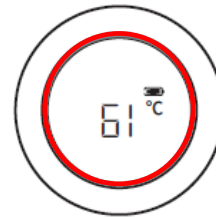

61°C – 99°C
Red Ring

- G. **Double-Walled Stainless Steel Construction:**

Your ONE80 Revolution™ features a double-walled stainless steel construction, keeping drinks cold up to 24-hours and hot up to 12-hours.



- H. **Anti-Slip Base:**

Your ONE80 Revolution™ features an anti-slip silicon base, keeping the ONE80 Revolution™ steady on any flat surface.



THANK YOU FOR JOINING THE
ONE80 REVOLUTION™

SECTION 2 – CHARGING INSTRUCTIONS



A. Connect the USB-C charging cable to the charging port.
**Do not use any other charging cable, other than the USB-C charging cable that was supplied with your ONE80 Revolution™*

B. Connect the other end of the USB-C cable to a USB port on your computer or wall charging adapter.

C. A red ring will continue to flash slowly until the charging is complete.

D. Your ONE80 Revolution™ features a Lithium-ion battery, which provides up to 20-days of standby time.

SECTION 3 – CLEANING INSTRUCTIONS

Your ONE80 Revolution™ is self-cleaning, so it does not require daily washing. The ONE80 Revolution™ bottle (not the cap) is dishwasher safe. The ONE80 Revolution™ cap should be hand-washed with warm soapy water. Please ensure you allow a minimum of 5-hours of air-drying time before charging.

SECTION 4 – WARNINGS & CAUTIONS

Use the ONE80 Revolution™ in accordance with the Operating Instructions only. Improper operation of the ONE80 Revolution™ may cause injury. Please read and understand all Warnings & Cautions prior to operating this product. Do not use the ONE80 Revolution™ in any manner other than instructed in this User Manual.

IMPORTANT:

- DO NOT put your ONE80 Revolution™ in the freezer or microwave.
- This Product is not suitable or intended for use by children, especially children under 10-years old. Keep the ONE80 Revolution™ out of the reach of small children.

Caution: Direct Ultraviolet exposure can be potentially harmful to the eyes or skin. Do not try to activate the UV-C sterilization when the cap is unscrewed from the bottle.

The ONE80 Revolution™ should not be used with any other type of bottle or product. Do not attempt to use the UV-C sterilization system with any bottles other than the ONE80 Revolution™.

Never tamper with, open or alter the ONE80 Revolution™ lid. If the ONE80 Revolution™ malfunctions or fails to perform as expected, stop use immediately. Do not open or attempt to repair the ONE80 Revolution™ lid or its components.

The UV-C bulb is an electrical device. Do not attempt to open, expose, modify or touch internal circuitry, as this can lead to an electric shock. Removal or tampering with the electronic circuit board of UV-C bulb assembly may cause injury or damage to you or the ONE80 Revolution™, and will void the warranty.

Storage: Store the ONE80 Revolution™ in a dry, room temperature environment. Do not charge the ONE80 Revolution™ near water, such as a kitchen sink, swimming pool, bathtub, etc. Do not expose the ONE80 Revolution™ to temperatures below 32°F (0°C) or above 90°F (32°C).

If the Lid containing the UV-C bulb assembly becomes damaged, cracked, or chipped, stop using the ONE80 Revolution™ immediately. You can contact the ONE80 Customer Support Team by emailing us at info@one80revolution.net

SECTION 5 – WARRANTY

The ONE80 Revolution™ comes with a **1-Year Limited Warranty** to repair or replace any defective material or components. The 1-Year Limited Warranty does not cover any issues due to normal wear and tear, misuse, or loss and theft of the product.

SECTION 6 – DISCLAIMER

By using the ONE80 Revolution™, you understand that you are voluntarily using it with full knowledge that there are inherent risks in doing so and you assume and accept any and **all risks** that may arise out of possession or use of the ONE80 Revolution™ including, but not limited to the risk of property damage or loss, and / or serious injury (including shock or even death). Neither Rayviant Inc. nor any of its associated and affiliated business entities, or its retailers and partners assume any responsibility or liability whatsoever for any injuries or damages, physical or otherwise, resulting directly or indirectly, from the use or possession of this ONE80 Revolution™.

Rayviant Inc. reserves the right to revise this document and to make changes from time to time in the contents thereof without obligation to notify any person of such revision or changes. This product model may be changed for improvements without notice at any time at the full discretion of Rayviant Inc.

The ONE80 Revolution™ is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have strict supervision by the person responsible for their safety.

The ONE80 Revolution™ is not a toy. Children should be supervised to ensure they do not play with the ONE80 Revolution™. The ONE80 Revolution™ can be used by children, from ages 10-years and above.